

**BACK OF CASE  
BOTTOM ADJUSTMENT**



**Instructions**



**Turn counter-clockwise  
to set fabric lower**



**Turn clockwise  
to set fabric higher**

**110VAc 60HZ**

Instructions



Turn counter-clockwise  
to set fabric higher



Turn clockwise  
to set fabric lower

FRONT OF THE CASE  
TOP ADJUSTMENT

