 


User Instruction

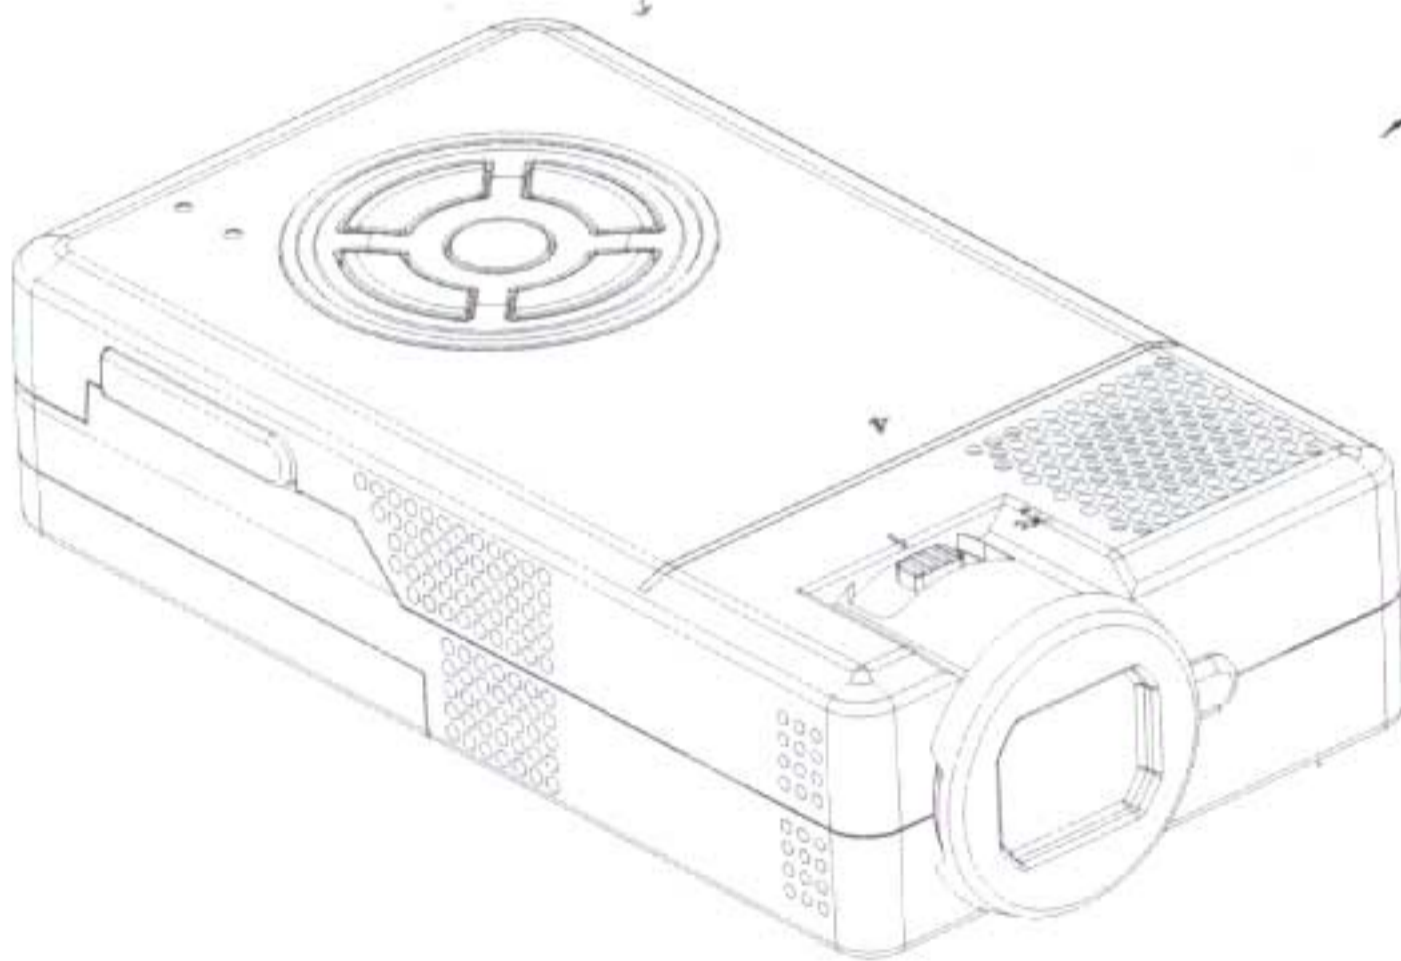

IMPORTANT

- This product is a micro projector with MP4 player function that can connect to mobile/iPhone, MP4/iPod, PSP, PDA, DVD, PC/Notebook and other digital products which have video and audio output for personal entertainment and small business presentation.
- Before using the product, please read the manual carefully.
- Please charge for 10 minutes before using battery.
- This product has 1G memory, and can insert an additional TF/Micro SD card with bigger memory.
- You have to leave 30 MB of free space in the memory of the player for the O.S.
- If MP4 function is not responding, please press RESET button to reset the MP4 player.
- Do NOT using the projector in wet or very hot place.
- The projection resolution is 640x480 pixels. Separately, the MP4 module recognizes the video is 640x480.
- When you turn off the MP4 module, please wait 3 seconds before turning it back on repeatedly.
- Contents in this user manual may change for better service.
- If the latest setting information of your product, please visit our website.
- If the player is unable to start up, please charge the player with the battery charger at first, and check whether the battery has been run out.
- If you need to play a large number of files in MP4 player, please recompress those files into a single file which can save the start up time and MP4 module will respond faster.


INDEX

Product List	1
Overview	1
Projector Specification	2
Basic Functions:	2
MP4 key functions description:	3
MP4 features:	4
Access to MP4 Menu	4
MP4 Function Descriptions	7
1. Music Mode	7
2. Video Mode	9
3. Photo Mode	10
4. Explorer Mode:	10
5. Settings Mode	11
Troubleshooting	12

Product List

Projector	1
Power Adaptor	1
AV Cable	1

 Overview

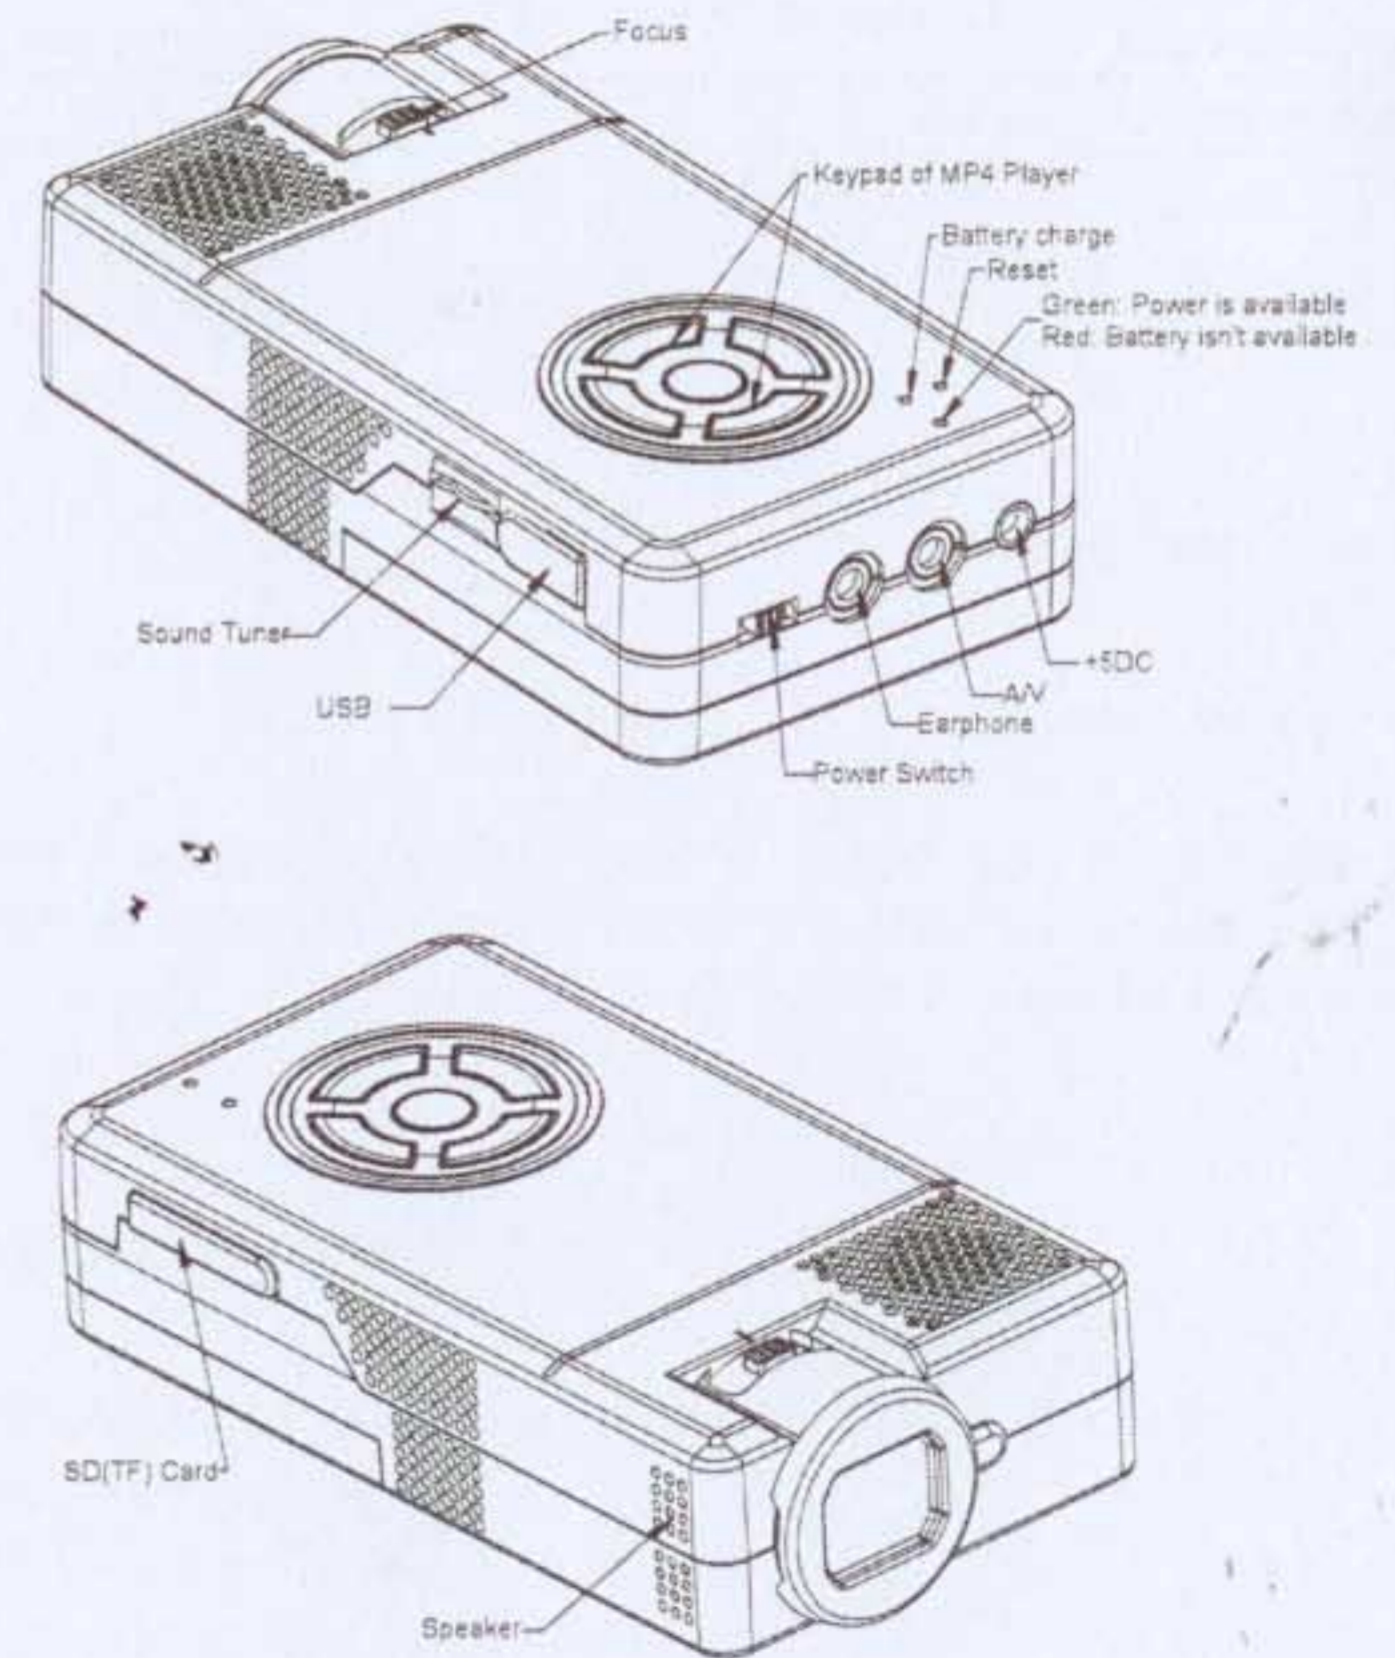


Projector Specification

Parameters	Normal	Unit	Remarks
Resolution	640x480	Pixel	
Aspect ratio	4:3		
Projection lens type	Manual focus		
Projection angle	51	Degree	
Recommended projection size	15-30 Diagonal	Inch	40-50" in dark environment
Light source	LED		
Lifetime	30000	Hour	
Input	A/V		NTSC/PAL
Weight	175	Gram	Include battery

Basic Functions:


1, Focus adjustment

To achieve the best quality projection image at different projection distance, please manually turn the focus nob. The focus mechanism is designed for projection distance from 0.2m to infinity.

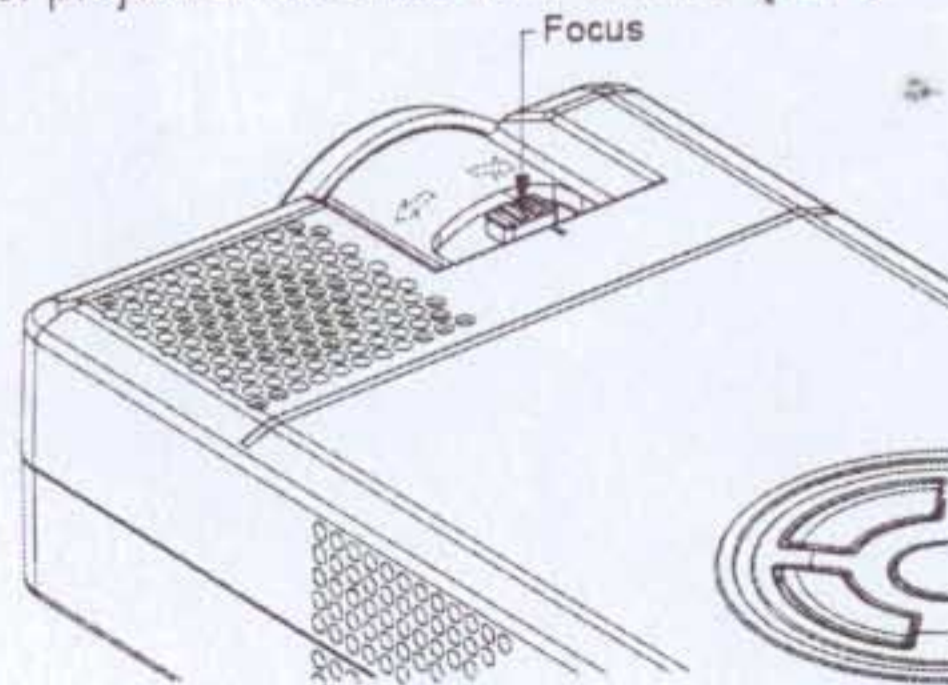


2

2, Connect to digital products (A / V input)

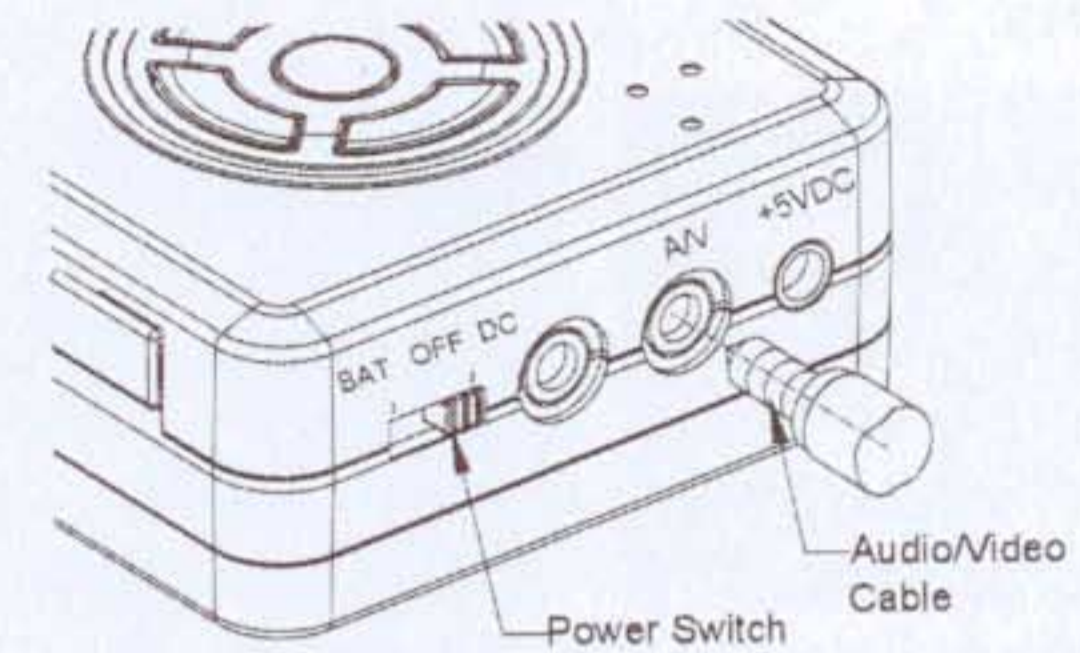

3, MP4 player

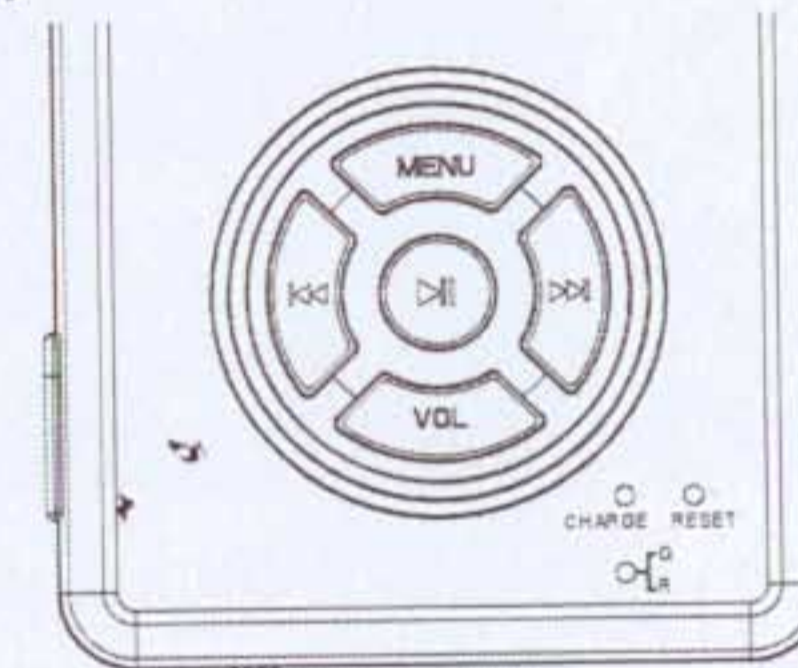

MP4 key functions description:

- MENU:** Key interface or short-press to go back to previous menu
- VOL+▶▶:** V+ volume up
- VOL+◀◀:** V- volume down
- ▶▶:** Select next track or fast forward
- ◀◀:** Select previous track or fast reverse

3

▶||: Play and Pause or short press enter sub-menu.

Power on, power off: pressed and hold for over 3 seconds.

MP4 features:

Explorer: Internal Media, Recorded List, All Audio Tracks, All Video Tracks, All Image Files.

System Settings: System Setting, Desktop, Language, System Information.

Browsing Pictures: Browsing pictures one by one or Slide show or Thumbnail (supports JPEG , BMP and GIF format).

Video Playback: Compatible with AVI, MPEG1, MPEG2, MPEG4 3G, WMV9/VC1, ASF, RM/RMVB and FLV formats (must use software to compress the size of files to 640*480 before playing).

Audio Playback: Compatible with MP3, WMA, WAV, APE, FLAC AAC/AAC+ and MPEG1/2/2.5 formats.

Access to MP4 Menu

**Please check no A/V input before into MP4 player.*


Press [Play]▶|| and hold 3 seconds, blue LED is light, MP4 power on, 3 second later, the start up logo displays.

Press [MENU] key to access the Menu mode and can access different menus from main menu.

1. Music Mode
2. Video Mode
3. Photo Mode
4. eBook Mode

5. Explorer Mode

6. Settings Mode

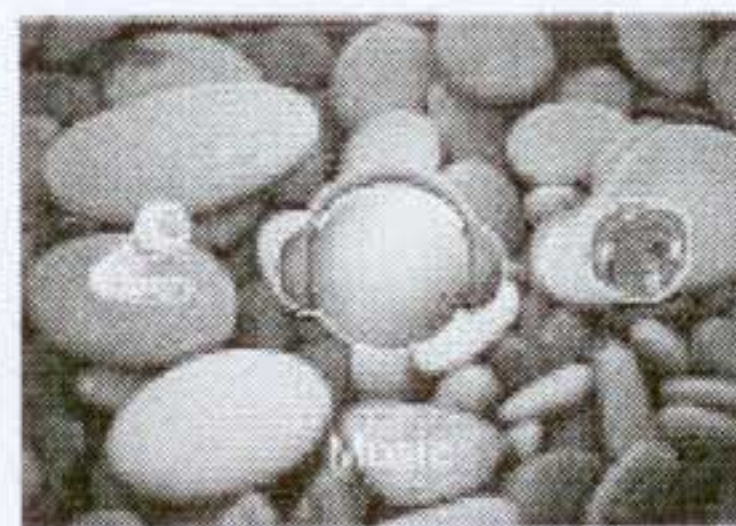

Music Mode



Video Mode



Photo Mode



eBook Mode



Explorer Mode



Settings Mode

MP4 Function Descriptions

1. Music Mode

- A. Switch on the player, then select Music Mode and press [Play]▶▶ to enter sub-menu, then select and press [Resume Play] and press [Play]▶▶ to play the music. Press ▶▶ to pause.
- B. Select music:
 - ◀◀ : Select previous song
 - ▶▶ : Select next song
- C. Volume Adjust: Press [VOL] key and
 - V+ : Increase volume
 - V- : Decrease volume
- D. Press ▶▶/◀◀ key over 1 seconds to do FR/FF function when playing the music.
- E. After enter Music mode, short press [Play]▶▶, you can view following sub-menus:

Resume play, All Music, Artist, Album, Genre, My Favorite, Media lib Update

In *Resume play* option, when the play list is displayed:

Press ▶▶/◀◀ to select the music, then press [Play]▶▶ to start the playback.

When all songs (traces) are displayed:

Press **▶▶/◀◀** key to select the song, press [Play] **▶||** to play.

When you press and hold [MENU] key, the following window will be displayed:

Repeat Mode—Repeat to play the selected music.

Play Mode—Can set playing in order and shuffle. Press "Last" "Next" key to select.

MSEQ—Can select: 3D, Bass IEQ . Press "Last" "Next" key to select

EQ Sel—Can select: Normal, MSEQ, Rock, Pop, Classic, Bass, Jazz, User EQ. Press "Last" "Next" key to select

Display—Can set the Lyric, Freq Chart and Close.

You can also find songs by:

- Artist: View each songs artist's information.
- Album: View each songs album's information.
- Genre: View each songs genre's information.

2. Video Mode

Select [Video] mode and press [Play] **▶||** to enter the menu. Press **▶▶/◀◀** enter the video play queue to select the video which you want to play. Then press **▶||** key to play the video file. When playing the video, you can press **▶▶/◀◀** key to increase/decrease the volume, or press **▶||** key to pause or press [MENU] key to back to previous menu.

*Note 1: The RM/RMVB video only supports the video file which is below 720*576. The bigger volume file, the longer time when start to play. Need to exchange the volume.*

*Note 2: AVI video only supports the video file which is below 800*480. The bigger volume file, the longer time when start to play. Need to exchange the volume.*

3. Photo Mode

Select [Photo] mode and press ► key to enter the following menu:

All Photos: You can view all image files. In this mode, you can press ► or ◀ key to select a picture and then press [Play]► to view the picture. You can press ► and ◀ to view the next /previous picture.

Manual: To view picture one by one through pressing ►/◀ key.

Thumbnail: You can view several pictures in one display. When browsing the pictures, you can press ►/◀ key to select next /previous picture, and press play ► to view the picture.

You can press [MENU] key once to go back to previous menu.

4. Explorer Mode:

Select [Explorer Mode] and press [Play]► key. The Explorer mode window will be displayed.

Press ►/◀ to view related information about following menu:

Internal Media, All Audio Tracks, All Video Tracks, All Image Files.

After selecting the sub-menu, press ► key once to enter and view the related information. Also you can press [Menu] key once to back to the previous menu.

In **Internal Media mode** you can view all files, including recorded files and image files.

In **All Audio Tracks mode** you only can view audio files.

In **All Video Tracks mode** you only can view video files.

In **All Image files mode** you can view all images information.

5. Settings Mode

Select [Settings] mode and press ► to enter the menu:

Press ►/◀ key to select next/previous item, and press ► key once to enter the sub-menu.

You can press [Menu] key once to go back to the previous menu.

System Setting:

1: **Upgrade:** Spring out a dialog frame, warning if firmware need to update. If don't, will exit.

2: **Restorable:** Spring out a dialog frame, warning whether return the system default value. If don't, will exit.

Desktop:

Under the setting menu, select Desktop, press ► to enter, press ►/◀ to select Desktop 1, Desktop2, Desktop3, Desktop4, Desktop5, Desktop6, Desktop7, Desktop8.

Language:

Under the settings menu, select language, press ► to enter, press ►/◄ key to select next/previous language.

Information:

Under the setting menu, select Information, press ► to enter, can see the company information, product number, flash memory, software version, card memory.

Troubleshooting

No power: Check battery level. Check switch is turned on.

No sound: Check if volume is in a null position and headphone plug is well connected. Corrupted media file may also cause static noise.

OSD Scrambled Code: Check if the right display language has been selected.

Failure of downloading media files: Check whether USB cable is in a healthy condition and connected properly. Check if driver is installed correctly on the computer. Check if there is enough free space.